



Despiece motocultor LANDER

Serie 200

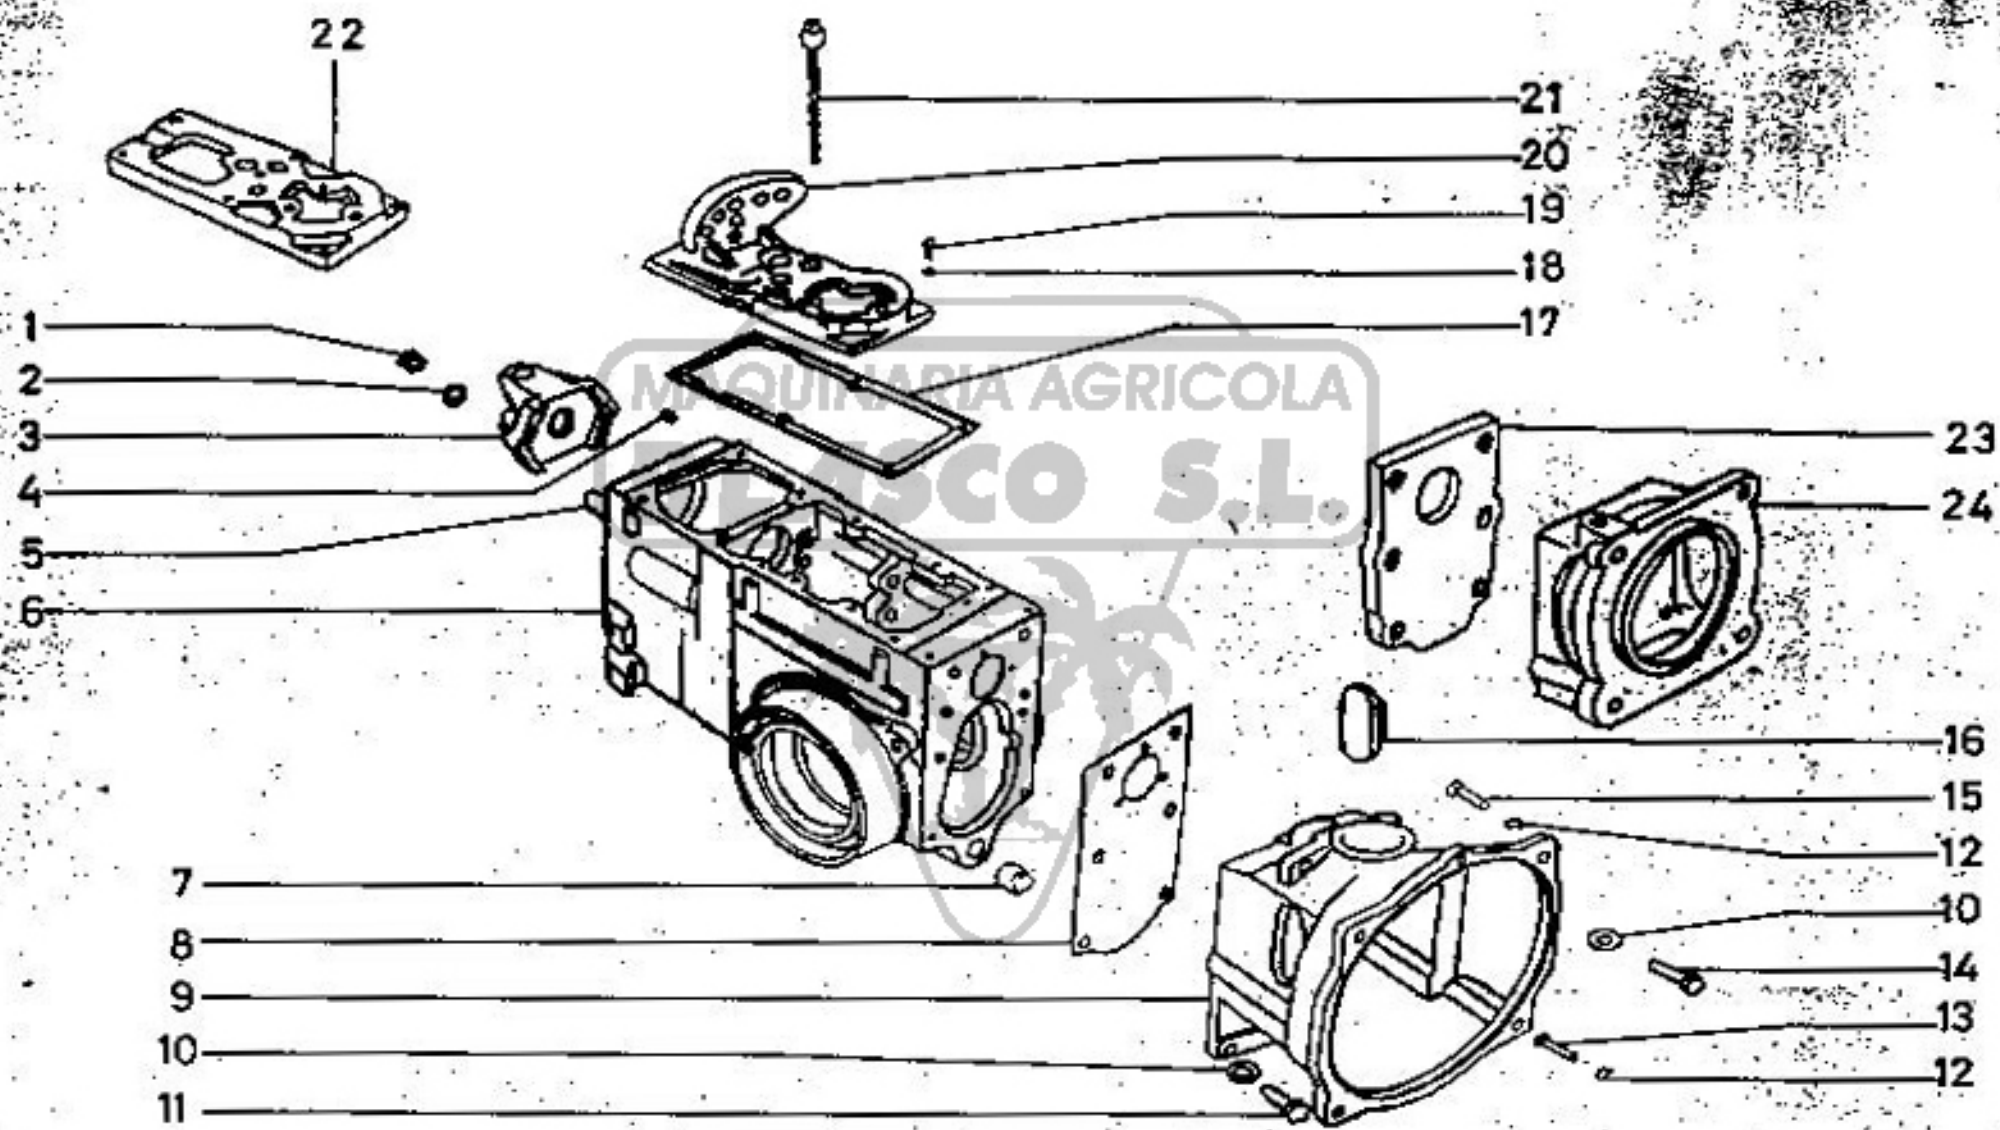

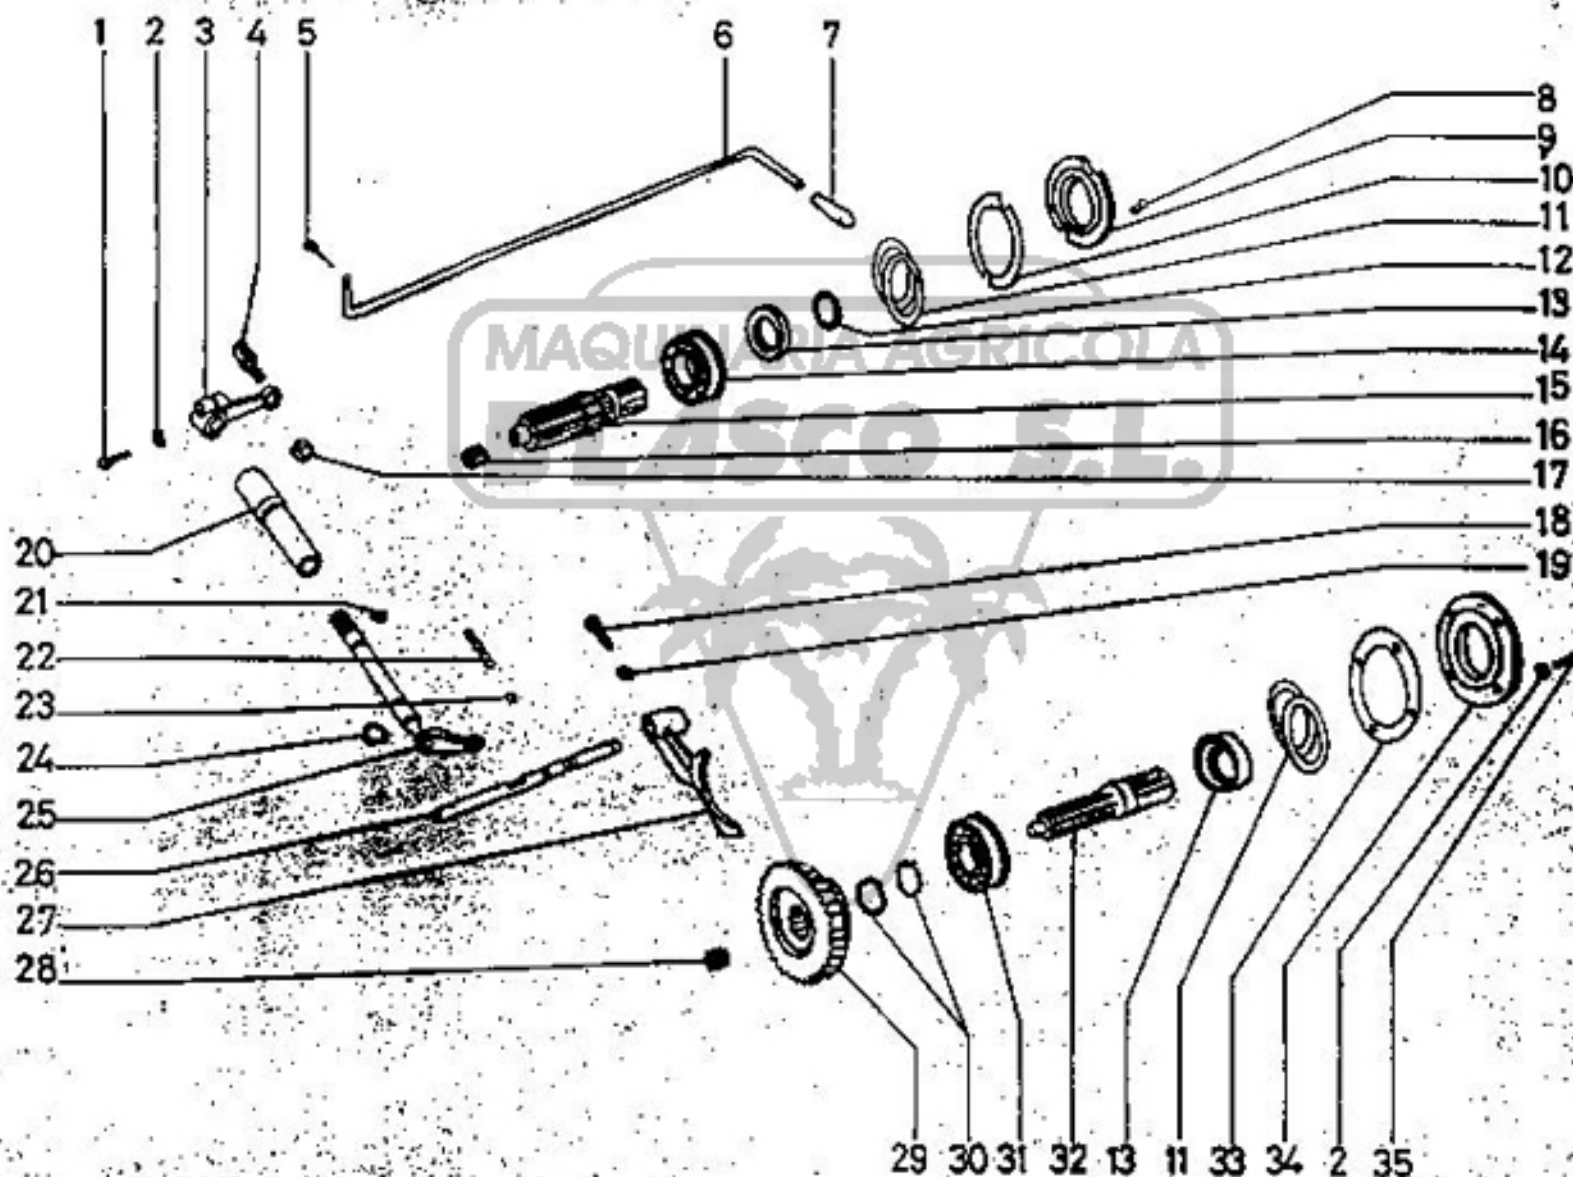





Motocultor 200

Diferencial

Lámina 3

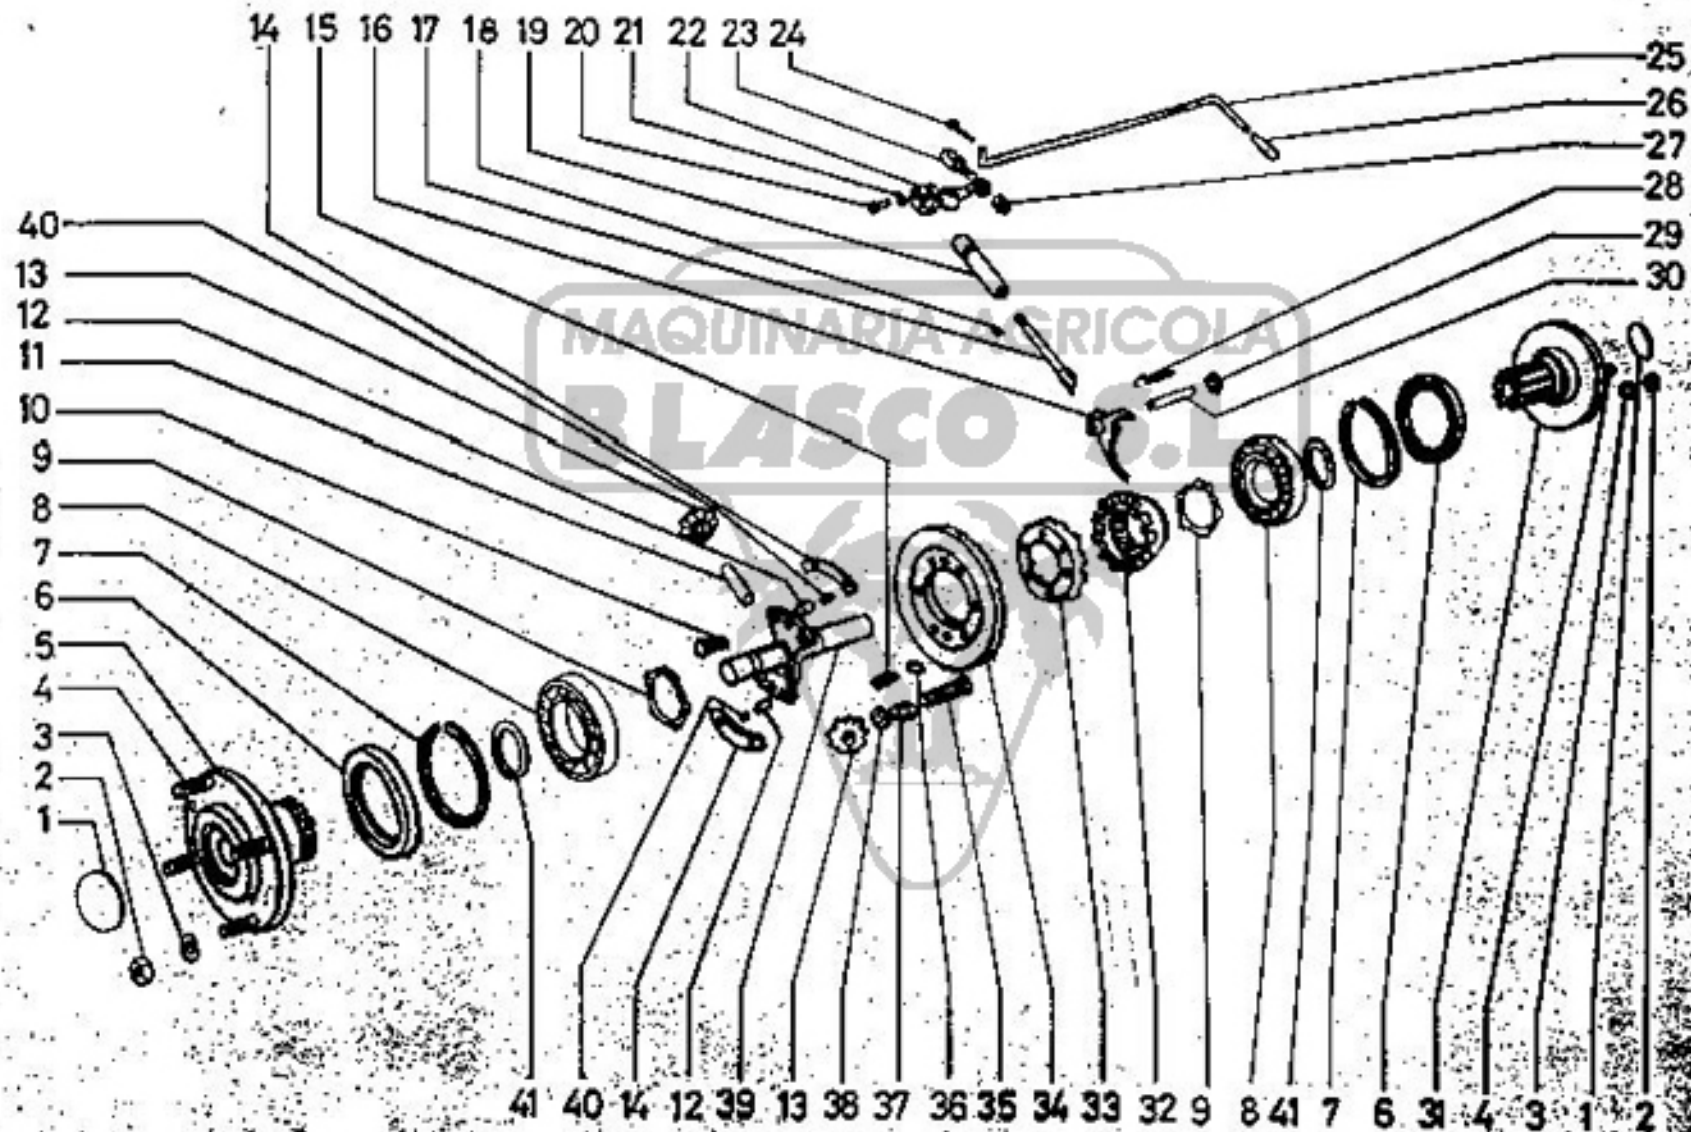

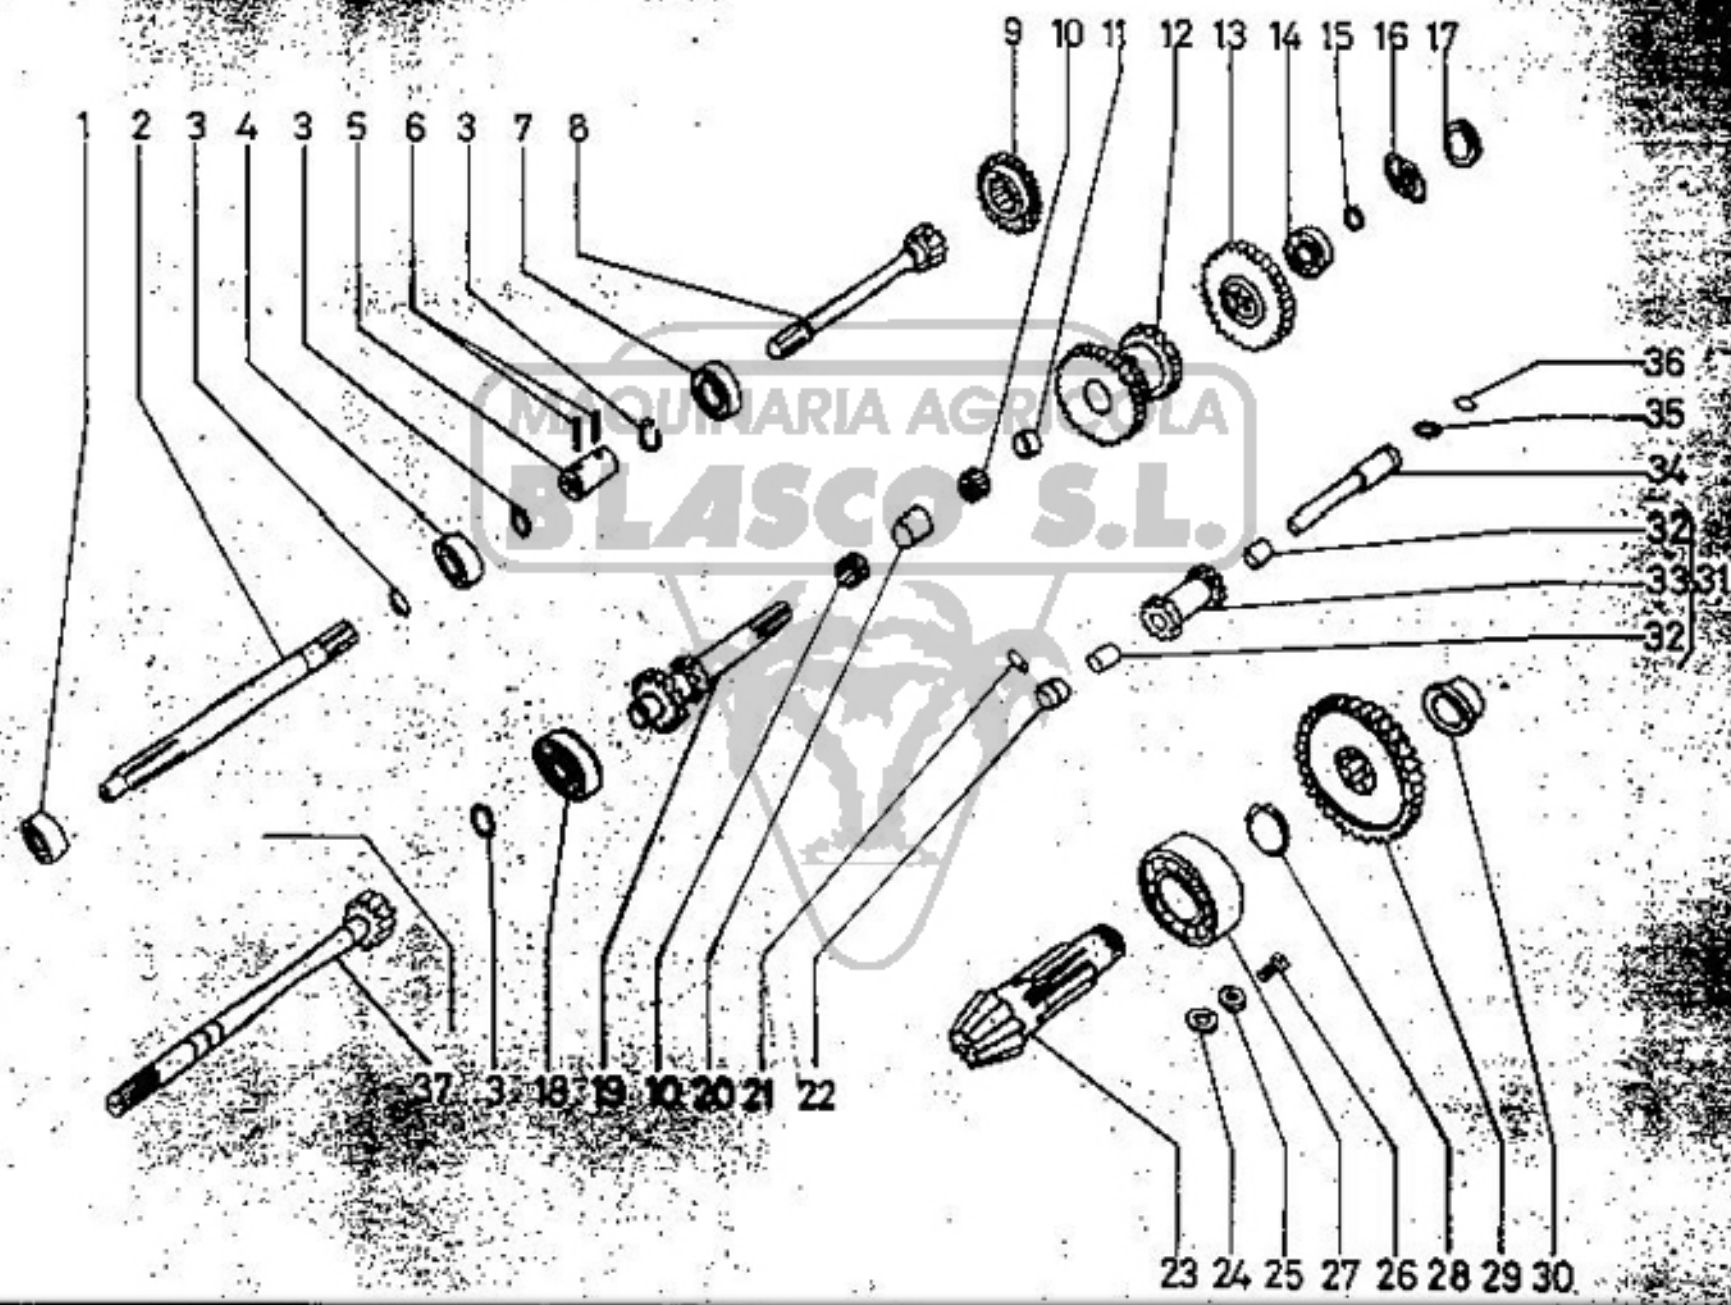


Motocultor

200

Mando Cambio

Lamina 5

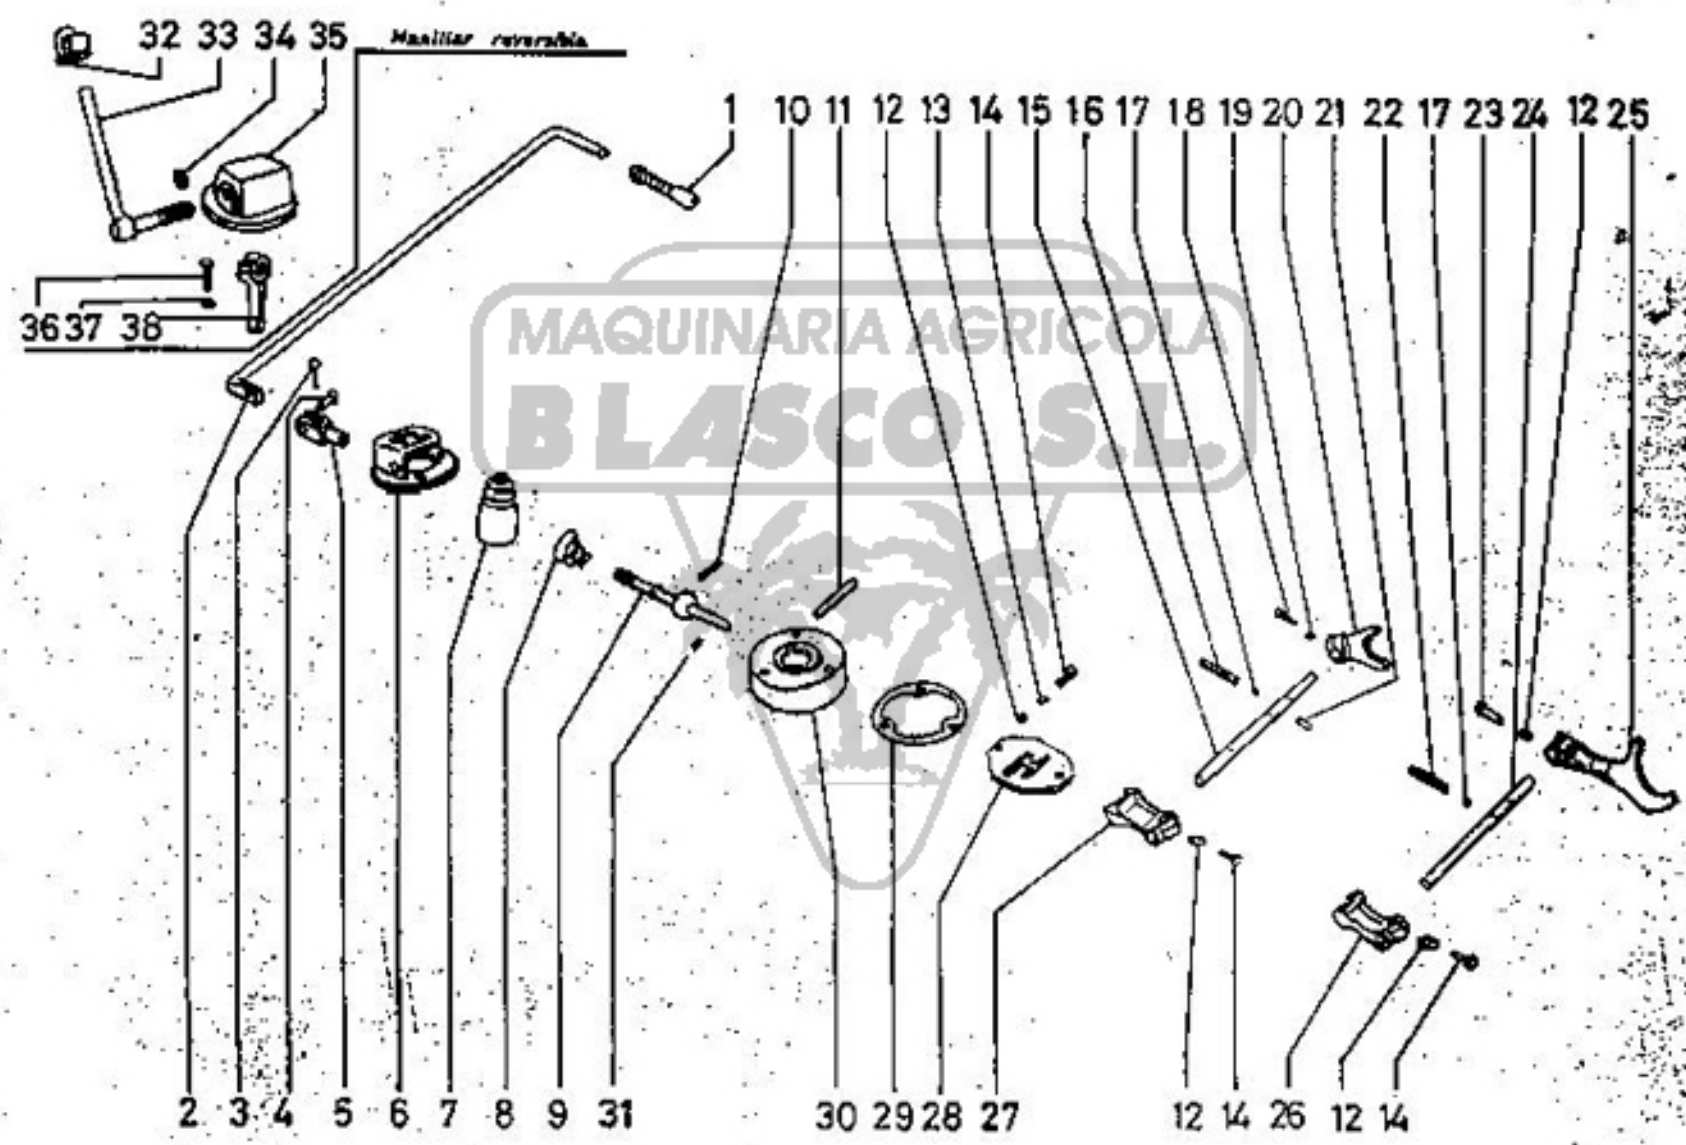

Motocultor 200

Embrague

Lamina

6

